

PRESTRESSED CONCRETE ANALYSIS AND DESIGN: FUNDAMENTALS

Third Edition, 2012

by **Antoine E. Naaman**, Ph.D.
Fellow ACI; Fellow ASCE; Fellow PCI; Fellow IFS
Professor Emeritus of Civil Engineering,
University of Michigan, Ann Arbor

Hardcover; 1176 pages; 7.25x9.5 in.

ISBN: 978-0-9674939-2-3; LCCN: 2011941025
Copyright 2012

US\$ 150.00


This book was written to serve as a thorough teaching text, a comprehensive source of information, and a basic reference. It is intended for advanced students, professional engineers, and researchers. It emphasizes the fundamental concepts of analysis and design of prestressed concrete structures, providing the user with the essential knowledge and tools to deal with everyday design problems, while encouraging the necessary critical thinking to tackle more complex problems with confidence.

Prestressed concrete is one of the most reliable, durable, and widely used construction materials in building and bridge projects around the world. It has made significant contributions to the construction industry, the precast manufacturing industry, and the cement industry as a whole. It has led to an enormous array of structural applications, including buildings, bridges, nuclear power vessels, TV towers, and offshore drilling platforms.

Main Features:

This updated edition

- Integrates the provisions of the 2011 ACI Building Code in text and examples
- Offers an extensive treatment of bridge analysis and design according to the 2010 AASHTO LRFD Specifications
- Offers a rigorous treatment of fundamentals as applied to serviceability and ultimate strength limit states for bending, shear, composite action, compression and tension members, and introduces some simple optimum design approaches
- Includes a large number of logical design flow charts and design examples
- Covers the basics and provides examples of applications comparing both the 2011 ACI and 2010 AASHTO LRFD code approaches to bending, shear and torsion, prestress losses, and interface shear
- Presents a chapter on strut-and-tie modeling according to the ACI Building Code with examples of anchorage zone design
- Covers slenderness effects in prestressed concrete columns, and provides load-moment interaction diagrams for prestressed columns and poles

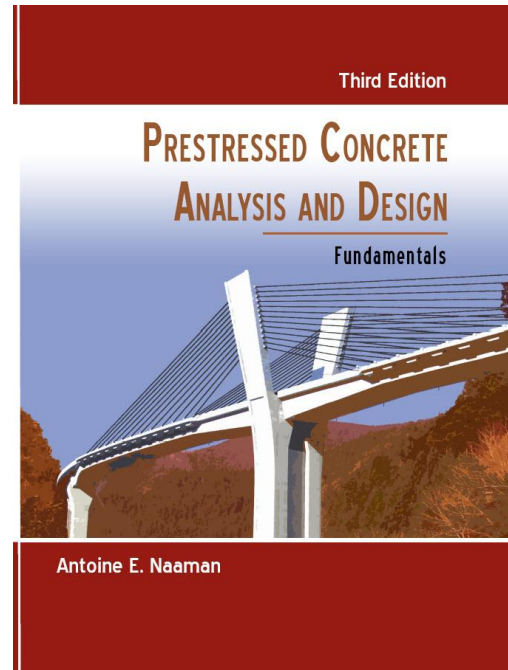

- Offers a comprehensive treatment of the design of one- and two-way prestressed slabs
- Presents a unique treatment of prestressed tensile members by optimum design, including the design of wall for circular tanks
- Covers the time-step procedure to compute prestress losses and long-term deflections
- Offers a rigorous treatment of prestressed continuous beams
- Presents a comprehensive treatment of prestressed composite beams
- Contains more than four hundreds illustrations and photographs
- Covers sufficient material for a two-semester course on the subject
- Contains a large number of examples, an extensive updated bibliography, and an appendix with answers to study problems
- Uses consistent notation and consistent sign convention
- Uses dual units (US and SI) throughout for key equations and reference data

Chapter 1	Principle and Methods of Prestressing
Chapter 2	Prestressing Materials: Steel and Concrete
Chapter 3	The Philosophy of Design
Chapter 4	Flexure: Working Stress Analysis and Design
Chapter 5	Flexure: Ultimate Strength Analysis and Design
Chapter 6	Design for Shear and Torsion
Chapter 7	Deflection Computation and Control
Chapter 8	Computation of Prestress Losses
Chapter 9	Analysis and Design of Composite Beams
Chapter 10	Continuous Beams and Indeterminate Structures
Chapter 11	Prestressed Concrete Slabs
Chapter 12	Analysis and Design of Tensile Members
Chapter 13	Analysis and Design of Compression Members
Chapter 14	Prestressed Concrete Bridges
Chapter 15	Strut-and-Tie Modeling
Appendix A	List of Symbols
Appendix B	Unit Conversions
Appendix C	Typical Post-Tensioning Systems
Appendix D	Answers to Selected Problems
Appendix E	Typical Precast / Prestressed Beams
Index	

CONTENTS

	Preface	xxiii
	Acknowledgments	xxix
Chapter 1	Principle and Methods of Prestressing	1
1.1	Introduction	1
1.2	Examples of Prestressing	2
1.3	History of Prestressed Concrete	4
1.4	Prestressing Methods	12

	1.4.1 Pretensioning	12
	1.4.2 Posttensioning	17
	1.4.3 Self-Stressing	22
1.5	Prestressing Systems	24
1.6	Particular Prestressing Techniques	25
	1.6.1 External Prestressing	25
	1.6.2 Circular Prestressing	27
	1.6.3 Stage Stressing	28
	1.6.4 Partial Prestressing	28
1.7	Prestressed Versus Reinforced Concrete	29
1.8	Example	32
1.9	Looking Ahead	37
1.10	Suggested Additional Reading	38
	References	38
	Problems	42
Chapter 2	Prestressing Materials: Steel and Concrete	45
2.1	Reinforcing Steels	45
2.2	Prestressing Steels	49
	2.2.1 Types of Prestressing Tendons	50
	2.2.2 Production Process	53
	2.2.3 Mechanical and Stress-Strain Properties	55
	2.2.4 Relaxation	58
	2.2.5 Effects of Temperature	62
	2.2.6 Fatigue	64
	2.2.7 Corrosion	68
2.3	Concrete	70
	2.3.1 Composition	70
	2.3.2 Stress-Strain Curve	71
	2.3.3 Mechanical Properties	74
	2.3.4 Shrinkage	78
	2.3.5 Creep	81
	2.3.6 Fatigue	85
	2.3.7 Effects of Temperature	85
	2.3.8 Steam Curing	86
2.4	Constitutive Modeling	87
	2.4.1 Stress-Strain Curve of Concrete in Compression	87
	2.4.2 Stress-Strain Curve of Reinforcing Steel in Tension	90
	2.4.3 Stress-Strain Curve of Prestressing Steels in Tension	93
2.5	Concluding Remarks	96
	References	96
	Problems	99
Chapter 3	The Philosophy of Design	103
3.1	What is Design?	103
3.2	Analysis or Investigation Versus Design	104
3.3	Design Objectives	104
3.4	Limit State Design Philosophy	105
3.5	Common Design Approaches	107
	3.5.1 WSD (or ASD)	109
	3.5.2 USD, SD, or LRFD	110
	3.5.3 Plastic Design, Limit Design, and Performance Based Plastic Design	113
	3.5.4 Nonlinear Design, Probabilistic Design	113

3.6	Design Codes	113
3.7	Loads	114
3.8	Allowable Stresses	117
	3.8.1 Concrete	117
	3.8.2 Prestressing Steel	121
	3.8.3 Reinforcing Steel	122
3.9	Load and Strength Reduction (or Resistance) Factors	123
	3.9.1 Load Factors	123
	3.9.2 Strength Reduction or Resistance Factors	125
3.10	ACI Code Viewpoint Related to Prestressed and Partially Prestressed Concrete	126
	3.10.1 Class Definition and Related Serviceability Design Requirements	126
	3.10.2 Tension Controlled and Compression Controlled Sections	128
3.11	Some Design Comparisons: Reinforced Versus Prestressed Concrete	130
	3.11.1 Practical Design Approach	130
	3.11.2 C-Force and C-Line	131
	3.11.3 Characteristic Response of RC, PC, and PPC in Bending in the Elastic Range of Behavior	132
	3.11.4 Curvature Computation	134
	3.11.5 Load Balancing Feature of Prestressing	136
3.12	Detailing of Reinforcement	137
3.13	Prestress Losses in Preliminary Design	140
3.14	Concluding Remarks	142
	References	142

Chapter 4 Flexure: Working Stress Analysis and Design 145

4.1	Analysis Versus Design	145
4.2	Concepts of Prestressing	150
4.3	Notations for Flexure	152
	4.3.1 Example: Computation of Sectional Properties	155
4.4	Sign Convention	155
	4.4.1 Examples	158
4.5	Loading Stages	160
4.6	Allowable Stresses	161
4.7	Mathematical Basis for Flexural Analysis	163
4.8	Geometric Interpretation of the Stress Inequality Conditions	167
4.9	Example: Analysis and Design of a Prestressed Beam	170
	4.9.1 Simply Supported T Beam	170
	4.9.2 Simply Supported T Beam with Single Cantilever on One Side	174
4.10	Use of Stress Inequality Conditions for Design of Section Properties	178
4.11	Examples of Use of Minimum Section Properties	184
	4.11.1 Minimum Weight Slab	184
	4.11.2 Minimum Weight Beam	186
	4.11.3 Selection of Optimum Beam from a Given Set of Beams	187
4.12	Limiting the Eccentricity along the Span	189
	4.12.1 Limit Kern Versus Central Kern	189
	4.12.2 Steel Envelopes and Limit Zone	193
	4.12.2.1 General Procedure	196

	4.12.3 Example	196
	4.12.4 Limit Location of Draping Section	199
4.13	Some Preliminary Design Tips	200
4.14	Cracking Moment	202
4.15	Limiting the Amount of Prestressed Reinforcement	203
4.16	End Zone: Pretensioned Members	204
	4.16.1 Transfer Length and Development Length	204
	4.16.2 End Zone Reinforcement	206
4.17	End Zone: Posttensioned Members	207
	4.17.1 Analysis of Stresses	207
	4.17.2 Anchorage Zone Design	209
	4.17.3 Simplified ACI Procedure for Rectangular Sections	213
	4.17.3.1 Example	214
	4.17.4 Example: Design of End Zone Reinforcement by Elastic Analysis	215
4.18	Extension of Feasibility Domain to Other Limit States	217
	4.18.1 Constraint for Ultimate Strength Design in Bending	217
	4.18.1.1 Example: Nominal Bending Resistance Constraint	219
	4.18.2 Constraint to Limit Camber or Deflection	220
	4.18.2.1 Example: Deflection Constraint	221
	References	222
	Problems	223
Chapter 5	Flexure: Ultimate Strength Analysis and Design	229
5.1	Load-Deflection Response	229
	5.1.1 RC Versus PC at Ultimate	232
5.2	Terminology	233
5.3	Flexural Types of Failures	234
5.4	Special Notation	235
5.5	General Criteria for Ultimate Strength Design of Bending Members	238
	5.5.1 Design Criteria	238
	5.5.2 Minimum Reinforcement or Minimum Moment Resistance: Code Recommendations	239
	5.5.3 ACI Code Provisions for Tension-Controlled, Transition, and Compression-Controlled Sections at Increasing Levels of Reinforcement	241
	5.5.4 Net Tensile Strain and c/d_e Ratio	246
	5.5.5 Amendments Adopted in this Text	248
	5.5.6 Recommendation on Maximum Reinforcement	249
5.6	Background for Analysis of Sections at Ultimate	250
	5.6.1 Objective – Assumptions	250
	5.6.2 Satisfying Equilibrium	253
5.7	Nominal Bending Resistance: Mathematical Formulation for Rectangular Section or Rectangular Section Behavior – Tension-Controlled	253
	5.7.1 Force Equilibrium	253
	5.7.2 Moment Equilibrium	255
	5.7.3 Solution Procedure	255
	5.7.4 Simplified Approximate Analysis	256
5.8	Stress in Prestressing Steel at Nominal Bending Resistance –	

	ACI Code	257
	5.8.1 Members with Bonded Prestressing Tendons	257
	5.8.2 Members with Unbonded Prestressing Tendons	258
5.9	Example: Nominal Bending Resistance of a Rectangular Section	259
	5.9.1 Partially Prestressed Section – Simplified Approximation	259
	5.9.2 Partially Prestressed Section – Using ACI Code Equation for f_{ps}	260
	5.9.3 Fully Prestressed Section	262
	5.9.4 Unbonded Tendons	262
5.10	Nominal Bending Resistance: Mathematical Formulation for T-Section Behavior of Flanged Section	262
	5.10.1 Condition for T-Section Behavior	262
	5.10.2 Fully Prestressed Section	264
	5.10.3 Partially Prestressed Section	265
	5.10.4 Remark	267
5.11	Example: Nominal Bending Resistance of T-Section	269
	5.11.1 Partially Prestressed Section	269
	5.11.2 Fully Prestressed Section	271
	5.11.3 Unbonded Tendons	271
	5.11.4 Odd Case	272
5.12	Stress in Prestressing Steel at Nominal Bending Resistance – AASHTO LRFD Code	273
	5.12.1 Members with Bonded Prestressing Tendons	273
	5.12.2 Members with Unbonded Prestressing Tendons	273
5.13	Nominal Bending Resistance: AASHTO LRFD Code	275
	5.13.1 Equilibrium Equations for Rectangular and Flanged Sections	275
	5.13.2 Solution for Members with Bonded Tendons	276
	5.13.3 Solution for Members with Unbonded Tendons	277
	5.13.4 Solution for Members with Both Bonded and Unbonded Tendons	277
	5.13.5 Example: PPC (Partially Prestressed Concrete) Rectangular Section by AASHTO	281
	5.13.6 Example: PPC (Partially Prestressed Concrete) T-Section with Bonded Tendons (AASHTO)	259
5.14	Transition between Tension-Controlled and Compression-Controlled Section in Bending	284
	5.14.1 ϕ Factor for Bending According to AASHTO	284
	5.14.2 Strategy for Design	285
5.15	Concept of Reinforcing Index	286
	5.15.1 Definitions	286
	5.15.2 Meaning of ω_e	287
	5.15.3 Useful Relationships	288
	5.15.4 Relationship between Reinforcement Ratio, Reinforcing Index, and c/d_e	290
5.16	Justification for the Definition of ω_e and d_e and their Relation to the Limitations on Levels of Reinforcement and Moment Redistribution	291
	5.16.1 Reinforced Concrete	292
	5.16.2 Prestressed Concrete	292
	5.16.3 Partially Prestressed Concrete	292
5.17	Derivation of Minimum Reinforcement Ratio, Minimum	

	Reinforcing Index, or Minimum c/d_e	293
5.17.1	Approximation: Minimum Reinforcement Ratio for Prestressed Concrete	293
5.17.2	Minimum Reinforcing Index for RC, PC, and PPC	294
5.17.3	Minimum c/d_e Ratio for RC, PC, and PPC Rectangular Sections	296
5.18	Satisfying Ultimate Strength Design Requirements	298
5.18.1	Basis for Ultimate Strength Design (USD)	298
5.18.2	Possible Remedies to Satisfy Inadequate Nominal Bending Resistance	299
5.19	Example: Analysis or Investigation Checking for All Ultimate Strength Design Criteria	300
5.20	Reinforcement Design for Ultimate Strength	302
5.20.1	Example: Reinforcement Design for Nominal Resistance – Rectangular Section	304
5.20.2	Example: Reinforcement Design for Nominal Resistance – T Section	308
5.21	Composite Beams	310
5.22	Continuous Beams and Moment Redistribution	310
5.23	Author's Recommendations for the Design of RC, PC, and PPC Beams at Ultimate	311
5.23.1	Using ε_{te} and d_e instead of ε_t and d_t	311
5.23.1.1	Example of Error in Using the Net Tensile Strain in Extreme Layer of Reinforcement	312
5.23.2	T-Section Behavior	313
5.23.3	Stress f_{ps} in Bonded Tendons at Ultimate	314
5.23.4	Stress f_{ps} in Unbonded Prestressing Tendons at Ultimate	314
5.24	Additional Design Examples Based on USD	318
5.24.1	Example 1: Analysis with Unbonded Tendons Illustrating Eq. (5.103)	319
5.24.2	Example 2: Given A_{ps} , Design for A_s Based on USD – Unbonded Tendons	321
5.24.3	Example 3: Given A_s , Design for A_{ps} Based on USD – Unbonded Tendons	323
5.24.4	Example 4: Given A_s , Design for A_{ps} Based on USD – Bonded Tendons	323
5.25	Concluding Remarks	324
	References	324
	Problems	326
Chapter 6	Design for Shear and Torsion	331
6.1	Introduction	331
6.2	Shear Design	332
6.3	Prestressed Versus Reinforced Concrete in Shear	332
6.4	Diagonal Tension in Uncracked Sections	334
6.5	Shear Stresses in Uncracked Sections	338
6.6	Shear Cracking Behavior	340
6.7	Shear Reinforcement after Cracking	343
6.8	ACI Code Design Criteria for Shear	347
6.8.1	Basic Approach	347
6.8.2	Shear Strength Provided by Concrete	348
6.8.2.1	Conservative Design Method to Estimate v_c or V_c	349

6.8.2.2	Elaborate Design Method to Estimate v_c or V_c	350
6.8.3	Required Area of Shear Reinforcement	353
6.8.4	Limitations and Special Cases	354
6.8.5	Critical Sections for Shear	356
6.9	Design Expedients	357
6.10	Example: Design of Shear Reinforcement (ACI Code)	360
6.10.1	Conservative Method to Determine v_c	361
6.10.2	Elaborate Method to Determine v_c	363
6.10.3	Design for Increased Live Load: Partially Prestressed Beam	367
6.11	Derivation of Concrete Nominal Shear Strength Equations (ACI Code)	367
6.12	AASHTO General Procedure for Shear Design	371
6.12.1	General Sectional Procedure for Shear Design	373
6.12.2	Special Considerations	380
6.12.3	Example: Shear Design by AASHTO LRFD Code (Using Modified Compression Field Theory)	384
6.12.4	Simplified Shear Design Procedure by AASHTO for Prestressed and Non-Prestressed Sections	388
6.12.5	Example: Using AASHTO Simplified Shear Design Procedure	391
6.13	Torsion and Torsion Design	392
6.14	Behavior under Pure Torsion	393
6.15	Background to Stress Analysis and Design for Torsion	396
6.15.1	Torsional Stresses	396
6.15.2	Torsional Cracking Strength	398
6.15.3	Torsional Resistance after Cracking	399
6.15.4	Combined Loading	402
6.15.5	Design Theories for Torsion and Code Related Approaches	404
6.16	Design for Torsion by ACI Code	406
6.16.1	Definition of Section Parameters	406
6.16.2	Basic Assumptions and Design Strategy	407
6.16.3	Threshold Limit for Consideration of Torsion in Design – $(T_u)_{min}$	408
6.16.4	Critical Section for Torsion	409
6.16.5	Maximum Allowable Torsional Moment Strength – Upper Limit	409
6.16.6	Transverse Reinforcement Design	411
6.16.7	Longitudinal Torsion Reinforcement	412
6.16.8	Combining Shear and Torsion Reinforcement	413
6.16.9	Minimum Torsion Reinforcement	413
6.16.10	Spacing and Detailing	414
6.16.11	Type of Torsion Reinforcement	414
6.16.12	Design Steps for Combined Torsion and Shear	416
6.17	Example: Torsion Design of a Prestressed Beam	416
6.18	Shear and Torsion in Partially Prestressed Members	419
6.19	Importance of Transverse Reinforcement	420
	References	421
	Problems	423

Chapter 7	Deflection Computation and Control	429
7.1	Serviceability	429

7.2	Deflection: Types and Characteristics	430
	7.2.1 Terminology / Notation	430
	7.2.2 Key Variables Affecting Deflections in a Given Beam	431
7.3	Theoretical Deflection Derivations	432
	7.3.1 Moment-Area Theorems	434
	7.3.2 Example	436
7.4	Short-Term Deflections in Prestressed Members	437
	7.4.1 Uncracked Members	437
	7.4.2 Cracked Members	440
7.5	Background to Understanding Long-Term Deflection	446
7.6	Additional Long-Term Deflection: Simplified Prediction Methods	448
	7.6.1 Additional Long-Term Deflection Using ACI Code Multiplier	450
	7.6.2 Additional Long-Term Deflection Using Branson's Multipliers	450
	7.6.3 Additional Long-Term Deflection Using Martin's Multiplier	451
	7.6.4 Additional Long-Term Deflection: Heuristic or "Rule of Thumb" Method	452
	7.6.5 Discussion	452
7.7	Deflection Limitations	453
7.8	Strategy for Checking Deflection Criteria	455
7.9	Example: Deflection of Uncracked or Cracked Prestressed Beam	456
	7.9.1 Fully Prestressed Beam – Uncracked under Full Service Load	457
	7.9.2 Partially Prestressed Beam	459
7.10	Integrating the Modulus of Concrete into Time-Dependent Deflection Calculations	462
	7.10.1 Age-Adjusted Effective Modulus	462
	7.10.2 Equivalent Modulus	463
	7.10.3 Equivalent Cyclic-Dependent Modulus	464
7.11	Long-Term Deflection by Incremental Time Steps	464
	7.11.1 Theoretical Approach	464
	7.11.2 Simplified C-Line Approach	465
7.12	Example: Time-Dependent Deflection Using the C-Line Approach and Comparisons	472
	7.12.1 Standard Precast Prestressed Double-T Beam	472
	7.12.2 Comparison of Long-Term Deflections Predicted from Different Methods	477
7.13	Time-Dependent Deflection Using C-Line Approach for Example 7.9.1	479
7.14	Deflection Control	481
7.15	Effective Moment of Inertia - Revisited	482
7.16	Concluding Remarks	484
	References	485
	Problems	486
Chapter 8	Computation of Prestress Losses	491
	8.1 Sources of Loss of Prestress	491
	8.2 Total Losses in Pretensioned Members	494
	8.3 Total Losses in Posttensioned Members	497

8.4	Methods for Estimating Prestress Losses	498
8.5	Lump Sum Estimate of Total Losses	500
	8.5.1 Background	500
	8.5.2 Lump Sum Estimate of Time-Dependent Prestress Losses: AASHTO LRFD	501
	8.5.2.1 Non Composite Members	501
	8.5.2.2 Composite Members	505
	8.5.2.3 Refined Estimate of Time Dependent Losses	506
8.6	Separate Lump Sum Estimate of Each Time-Dependent Loss – AASHTO LRFD	506
	8.6.1 Total Loss Due to Shrinkage	507
	8.6.2 Total Loss Due to Creep	507
	8.6.3 Total Loss Due to Relaxation	508
	8.6.4 Losses for Deflection Calculations	510
	8.6.5 Example: Losses Due to Relaxation	510
8.7	Loss Due to Elastic Shortening	511
	8.7.1 Pretensioned Construction: Approximate Method and AASHTO LRFD	512
	8.7.2 Pretensioned Construction: Accurate Method	513
	8.7.3 Posttensioned Construction: AASHTO LRFD	513
	8.7.4 Posttensioned Construction: Accurate Method	514
8.8	Example: Elastic Shortening Loss in Pretensioned Beam	516
8.9	Example: Computation of Prestress Losses for a Pretensioned Beam by Lump Sum Estimates of Total and Separate Losses	518
	8.9.1 Lump Sum Estimate of Total Losses by AASHTO LRFD	518
	8.9.2 Lump Sum Estimates of Separate Losses by AASHTO LRFD	518
8.10	Example: Typical Stress History in Strands	519
8.11	Time-Dependent Loss Due to Steel Relaxation	520
8.12	Time-Dependent Loss Due to Shrinkage	523
	8.12.1 Shrinkage Strain Recommended in AASHTO LRFD	525
	8.12.2 Example: Shrinkage Loss Assuming No Other Loss Occurs	527
8.13	Time-Dependent Loss Due to Creep	529
	8.13.1 Creep Coefficient Recommended in AASHTO LRFD	531
	8.13.2 Example: Creep Loss Assuming No Other Loss Occurs	532
8.14	Prestress Losses by Time-Step Method	534
8.15	Example: Computation of Prestress Losses for a Pretensioned Beam by Time-Step Method	536
8.16	Loss Due to Friction	541
	8.16.1 Analytical Formulation	541
	8.16.2 Graphical Representation	544
	8.16.3 Example: Computation of Losses Due to Friction	545
8.17	Loss Due to Anchorage Set	548
	8.17.1 Concept of Area Lost or Equivalent Energy Lost	552
	8.17.2 Example: Loss Due to Anchorage Set	552
8.18	Loss Due to Anchorage Set in Short Beams	555
	8.18.1 Example: Anchorage Set Loss in a Short Beam	556
8.19	Concluding Remarks	557
	References	558
	Problems	561

Chapter 9	Analysis and Design of Composite Beams	565
9.1	Types of Prestressed Concrete Composite Beams	565
9.2	Advantages of Composite Construction	566
9.3	Particular Design Aspects of Prestressed Composite Beams	568
9.4	Loading Stages, Shored Versus Unshored Beams	569
9.5	Effective and Transformed Flange Width and Section Properties	570
	9.5.1 Effective Flange Width	570
	9.5.2 Transformed Flange Width	572
	9.5.3 Cross Section Properties of Composite Section	574
9.6	Interface Shear or Horizontal Shear	575
	9.6.1 Evaluation of Horizontal Shear	575
	9.6.2 ACI Code Provisions for Horizontal Shear at Contact Surface	578
	9.6.2.1 Shear Transfer Resistance	578
	9.6.2.2 Shear Friction Reinforcement: Sectional Design	580
	9.6.2.3 Shear Friction Reinforcement: Segment Design	582
9.7	Flexure: Working Stress Analysis and Design	585
	9.7.1 Extreme Loadings	585
	9.7.2 Stress Inequality Conditions	586
	9.7.3 Feasible Domain, Limit Kern, Steel Envelopes	590
	9.7.4 Cracking Moment	591
	9.7.5 Minimum Section Moduli of Composite Sections	591
	9.7.6 Example: Selection of Optimum Beam from a Given Set of Beams	594
9.8	Flexure: Ultimate Strength Analysis and Design	597
9.9	Designing for Shear and Torsion	599
9.10	Deflections	600
	9.10.1 Sequence of Computations	601
9.11	Example: Prestressed Composite Floor Beam	602
9.12	AASHTO LRFD Provisions on Interface Shear Reinforcement at Contact Surface of Composite Beams	616
	9.12.1 General Design Approach	617
	9.12.2 Factored Interface Shear Force per Unit Length of Interface, V_{uh}	618
	9.12.3 Nominal Interface Shear Resistance per Unit Length, V_{nh}	619
	9.12.4 Minimum Interface Shear Reinforcement	621
	9.12.5 Practical Recommendation	622
	9.12.6 Example	623
	References	625
	Problems	626
Chapter 10	Continuous Beams and Indeterminate Structures	629
10.1	Advantages and Forms	629
10.2	Necessary Analytical Background	632
10.3	Sign Convention and Special Notation	633
10.4	Secondary Moments and Zero-Load-C (ZLC) Line	634
10.5	Example: Secondary Moments and Concordancy Property	637
10.6	Linear Transformation	640
10.7	Concordant Tendons	641
10.8	External Loads Equivalent to Prestressing	643
	10.8.1 Concept of Equivalent Load	644

	10.8.2 Application of Equivalent Load to a Continuous Tendon	646
	10.8.3 Example: Equivalent Load	647
	10.8.4 Example: Equivalent Load for Circular and Parabolic Tendon Profile	650
10.9	Prestressing Moment and Elastic Stresses	654
	10.9.1 Moment Due to Prestressing, M_F	654
	10.9.2 Example: Prestressed Moments by the Equivalent Load Method	656
	10.9.3 Elastic Stresses in a Continuous Beam	661
10.10	Design Aids	662
10.11	Working Stress Analysis and Design	666
	10.11.1 Assumptions	666
	10.11.2 Analysis or Investigation	666
	10.11.3 Design	667
10.12	Limit Kern and Limit Zone	669
10.13	Load-Balancing Method	671
	10.13.1 General Approach	671
	10.13.2 Load Balancing of Edge-Supported Slabs	674
	10.13.3 Example: Load Balancing of an Edge-Supported Slab	676
	10.13.4 Load Balancing of Frames	678
	10.13.5 Limitations of Load Balancing	679
10.14	Ultimate Strength Analysis	680
	10.14.1 Treatment of Secondary Moments	680
	10.14.2 Limit Analysis	680
	10.14.3 Redistribution of Moments	683
	10.14.4 Secondary Moment and Moment Redistribution	685
	10.14.5 Prediction of Plastic Rotation in PPC Beams	686
10.15	Example: Design of a Prestressed Continuous Beam	687
10.16	Useful Design Aids for Continuous Beams	698
	References	702
	Problems	703
Chapter 11	Prestressed Concrete Slabs	709
11.1	Slab Systems	709
	11.1.1 General Design Approach	713
11.2	Unbonded Tendons in One- and Two-Way Slab Systems	714
	11.2.1 Stress at Ultimate in Unbonded Tendons	715
11.3	Design of One-Way Slabs	717
	11.3.1 Design Procedure	718
	11.3.2 Minimum Bonded Reinforcement	720
	11.3.3 Temperature and Shrinkage Reinforcement	721
	11.3.4 Additional Design Notes	721
	11.3.5 Deflection	722
11.4	Example: Design of a Five-Span Continuous One-Way Slab Prestressed with Unbonded Tendons	722
11.5	Characteristics of Two-Way Flat Slabs	729
	11.5.1 Load Path	729
	11.5.2 Reinforcement Layout	730
	11.5.3 Theoretical Distribution of Moments	732
	11.5.4 Special Notations	732
11.6	Analysis and Design Methods	734
	11.6.1 Analysis	734

	11.6.2 Design	734
	11.6.3 Load Balancing	734
11.7	Analysis by the Equivalent-Frame Method	736
	11.7.1 General Approach	737
	11.7.2 Computation of Moments and Shear Forces	737
11.8	Design Distribution of Moments and Tendons	740
11.9	Preliminary Design Information and Design Tips	743
	11.9.1 Slab Thickness and Reinforcement Cover for Fire Safety	744
	11.9.2 Punching Shear	744
	11.9.3 Average Prestress	744
	11.9.4 Nonprestressed Reinforcement	745
	11.9.5 Deflection	745
11.10	Prestressed Flat Plates: Design for Flexure	745
	11.10.1 Working Stress Design	745
	11.10.2 Allowable Stresses	746
	11.10.3 Ultimate Strength Design	747
	11.10.4 Minimum Bonded Reinforcement	747
	11.10.5 Integrity Tendons and Other Reinforcement	749
	11.10.6 Nominal to Cracking Moment Condition	750
11.11	Flat Plates: Design for Shear	750
	11.11.1 Concrete Shear Capacity	750
	11.11.2 Transfer Moment Between Columns and Slab	753
	11.11.3 Maximum Shear Stress in Critical Section	756
	11.11.4 Design Tips	761
	11.11.5 Shear Reinforcement	761
11.12	Deflection of Flat Plates	764
	11.12.1 Elastic Solution	764
	11.12.2 Equivalent Frame Approach	768
11.13	Summary of Design Steps for Two-Way Prestressed Flat Plates	771
11.14	Example: Design of a Two-Way Prestressed Flat Plate	772
11.15	Fiber Reinforcement for Punching Shear	790
	References	791
	Problems	794
Chapter 12	Analysis and Design of Tensile Members	797
12.1	Types of Tension Members	797
12.2	Advantages of Prestressed Concrete Tension Members	799
	12.2.1 Example: Relative Deformation of Tension Members	800
12.3	Behavior of Prestressed Concrete Tension Members	801
12.4	Analysis of Tension Members	805
	12.4.1 Service Stresses, Decompression, Cracking and Ultimate Load	805
	12.4.2 Short- and Long-Term Deformations in Linear Members	809
	12.4.3 Example: Analysis-Investigation of a Tension Member	811
12.5	Optimum Design of Tension Members	814
	12.5.1 Formulation of Design Criteria	814
	12.5.2 Design Approximations	819
	12.5.3 Minimum Cost Solution	820
	12.5.4 Example: Minimum Cost Design of Tensile Member	822

12.6	Circular Structures: Tanks and Pressure Vessels	824
	12.6.1 Construction Methods	826
	12.6.2 Analysis of Stresses	829
	12.6.2.1 Ring Stresses	832
	12.6.3 Wall Design	834
	12.6.3.1 Design Criteria	834
	12.6.3.2 Minimum Wall Thickness	835
	12.6.3.3 Minimum Residual Prestress	836
	12.6.3.4 Rapid Dimensioning of Wall Thickness and Prestressing	836
	12.6.3.5 Radial Deflection	838
	12.6.3.6 Additional Design Information	839
	12.6.4 Example: Preliminary Design of Cylindrical Tank Wall	840
12.7	Example: Preliminary Dimensioning of a Tension Ring Beam	846
12.8	Practical Design Considerations	848
12.9	Combined Tension and Bending	848
	References	849
	Problems	851
Chapter 13	Analysis and Design of Compression Members	853
13.1	Types of Compression Members and Their Advantages	853
13.2	Behavior of Columns	857
	13.2.1 Load-Deformation Response	857
	13.2.2 Classification	858
	13.2.3 Load-Moment Interaction Diagram	858
	13.2.4 ACI Code Design Interaction Diagram	861
13.3	Analysis of Short Columns	863
	13.3.1 Assumptions	863
	13.3.2 Basic Equations for Fully Prestressed Square and Rectangular Sections	865
	13.3.3 Partially Prestressed Square or Rectangular Sections	867
	13.3.4 Circular Hollow-Core and I-Shaped Sections	869
13.4	Example: Column Load-Moment Interaction Diagram	872
13.5	ACI Code Provisions and Other Design Considerations	881
	13.5.1 Minimum Longitudinal Reinforcement	881
	13.5.2 Lateral or Transverse Reinforcement	881
	13.5.3 Minimum Size of Columns	884
	13.5.4 Minimum Eccentricity	884
	13.5.5 Transfer Zone	884
13.6	Slender Columns: Theoretical Background	885
	13.6.1 Critical Buckling Load	885
	13.6.2 Effective Slenderness Ratio	886
	13.6.3 Definition of Braced, Unbraced, Sway and Non- Sway Columns or Frames	887
	13.6.4 Single and Double Curvature	888
	13.6.5 Terminology and Definitions	888
	13.6.6 Flexural Rigidity Under Cracked Conditions for First- Order Frame Analysis	890
13.7	Slenderness Effects: ACI Code Philosophy	891
13.8	ACI Code Design Provisions for Slender Columns by the Moment Magnifier Method	894
	13.8.1 Sway and Non-Sway Conditions	894

	13.8.2 Effective Length Factor k	895
	13.8.3 Effective Slenderness Ratio and Slenderness Condition	897
	13.8.4 ACI Moment Magnifier Procedure for Non-Sway Frames	899
	13.8.5 ACI Moment Magnifier Procedure for Sway Frames with $22 < kl_u / r < 100$	901
	13.8.6 Additional Design Checks	905
	13.8.7 Design According to the PCI Committee on Columns	905
13.9	Example: Slender Column Using the PCI Approach	906
	13.9.1 Non-Sway or Braced Column	906
	13.9.2 Sway or Unbraced Column	911
13.10	Design Expedients and Design Aids	914
	13.10.1 Preliminary Dimensioning	914
	13.10.2 Design Charts: Load-Moment Interaction Diagrams	915
13.11	Biaxial Bending	924
13.12	New Design Methodology for Slender Prestressed Columns	927
	13.12.1 Example: Computation of EI for a Slender PC Column Using Shuraim and Naaman's Procedure	930
13.13	Concluding Remarks	933
	References	933
	Problems	936
Chapter 14	Prestressed Concrete Bridges	939
14.1	Scope	939
	14.1.1 Special Design Characteristics of Bridge Members	941
14.2	Types of Bridges	941
	14.2.1 Short-Span Bridges	943
	14.2.2 Medium- and Long-Span Bridges Using Precast Beams	943
	14.2.3 Long- and Very Long-Span Bridges	951
14.3	Rational Evolution of Bridge Form with Span Length	956
	14.3.1 Evolution of Deck Section	956
	14.3.2 Evolution of Support Structure and Form	957
14.4	Special Construction Techniques for Bridges	960
	14.4.1 Segmental Construction and Cable Stayed Bridge Construction	960
	14.4.2 Truss Bridges	964
	14.4.3 Stress Ribbon or Inverted Suspension Bridges	965
	14.4.4 Use of New Materials	969
14.5	Design Specifications and General Design Philosophy	972
	14.5.1 Limit States	972
	14.5.2 Load Combinations, Load Factors and Resistance Factors	974
	14.5.3 Allowable Stresses for Service Limit States	978
14.6	Bridge Live Loads	980
	14.6.1 Traffic Lane and Design (or Loading) Lane	980
	14.6.2 Basic Types of Live Loads	981
	14.6.3 Live Load Combinations for Design	982
	14.6.4 Conditions of Application of Live Loads	983
	14.6.5 Impact Factor	985
	14.6.6 Multiple Presence Factor	985
	14.6.7 Pedestrian Load and Sidewalk Load	985

	14.6.8 Deflection Limit	986
	14.6.9 Other Requirements	986
14.7	Distribution of Live Loads and Beam Distribution Factors	987
	14.7.1 Load Distribution Factors	987
	14.7.2 Remarks Related to a Particular Bridge Deck Type	994
	14.7.3 Simplified Distribution Factor by Heuristic Approach	995
14.8	Design Aids for Live Load Moments and Shears for One Loading Lane	996
	14.8.1 General Rule for Concentrated Loads in Simply Supported Spans	996
	14.8.2 Equations for Live Load Moments and Shears in Simply Supported Spans	997
	14.8.3 Design Chart for Simply Supported Spans	1000
	14.8.4 Design Charts for Live Load Moments at Supports of Continuous Beams with Equal Spans	1000
14.9	Moments and Shears in Typical Girders	1004
14.10	Example: Composite Bridge with Cast-in-Place Reinforced Concrete Slab on Top of Prestressed I-Girders	1005
	14.10.1 Live Load Moments and Shears at Critical Sections	1006
	14.10.2 Detailed Design of Prestressed I Beams	1008
14.11	Example: Bridge Deck with Adjacent Precast Pretensioned Box Beams	1022
14.12	Example: Negative Live Load Moment in Two-Span Continuous Bridge Deck	1028
14.13	Slabs for Bridge Decks and Solid Slab Bridges	1031
	14.13.1 Equivalent Strip Width for Slab Type Bridges and Distribution Factor for Slabs	1031
	14.13.2 Minimum Depth and Clear Concrete Cover	1032
	14.13.3 Cast-in-Place One-Way Prestressed Slabs	1032
	14.13.4 Traditional Design of Reinforced Concrete Deck Slabs	1033
	14.13.5 Empirical Design of Slabs	1034
	14.13.6 Temperature and Shrinkage Reinforcement	1035
	14.13.7 Moments for Slabs Supported on Four Sides	1036
14.14	Example: Design of a Cast-in-Place Posttensioned Slab Bridge	1036
14.15	Precast Bridge Beams Made Continuous by a Cast-in-Place RC Slab	1040
	14.15.1 Example: Prestressed Bridge Beams Made Continuous by Cast-in-Place RC Slab	1042
14.16	Design Charts for Prestressed Bridge Beams	1046
14.17	Preliminary Design Tips for Dimensioning	1047
14.18	Other Design Considerations	1049
14.19	Bridge Engineering: Looking Ahead	1050
	References	1053
	Problems	1055
Chapter 15	Strut-and-Tie Modeling	1061
15.1	Introduction	1061
	15.1.1 Background and Motivation	1061
	15.1.2 B- and D-Regions	1062
	15.1.3 Trusses and Strut-and-Tie Models	1065
	15.1.4 ACI Code Definition	1066

15.2	Elements of Strut-and-Tie Models	1067
	15.2.1 Assumptions	1068
	15.2.2 Mechanical Requirements and Geometry Rules	1069
	15.2.3 Requirements for Nodal Zones	1069
	15.2.4 External and Unbonded Prestressing Tendons	1070
	15.2.5 Terminology / Notation	1071
15.3	Design Steps to Build a Strut-and-Tie Model (STM)	1071
	15.3.1 Initial Checks	1071
	15.3.2 Design Steps	1072
15.4	Design Philosophy	1076
15.5	Design of Ties	1076
	15.5.1 Prestressing Tendons	1077
15.6	Design of Struts	1078
15.7	Design of Nodal Zones	1081
	15.7.1 Assumptions	1081
	15.7.2 Dimensioning	1081
	15.7.3 Anchorages	1082
	15.7.4 Nominal Strength	1083
15.8	STM by AASHTO LRFD	1084
15.9	Anchorage Zones of Prestressed Members	1085
15.10	Example: Anchorage Zone Design by STM	1087
	15.10.1 Two Spread-Out Anchorages	1088
	15.10.2 Two Anchorages Placed Close to Each Other	1097
15.11	Dapped-End Beams	1098
15.12	Example: Dapped-End Beam Design by STM	1100
15.13	Examples of Applications of Strut-and-Tie Models to Various Structures	1107
15.14	Concluding Remarks	1113
	References	1113
	Problems	1115
Appendix A	List of Symbols	1117
Appendix B	Unit Conversions	1130
Appendix C	Typical Post-Tensioning Systems	1133
Appendix D	Answers to Selected Problems	1153
Appendix E	Examples of Standard Precast / Prestressed Beams	1159
INDEX		1167

